



Automated Wildlife Feeder

AWF300 & AWF1000 Models



Operator's Manual

Safety related warnings and instructions follow this Alert Symbol and are used to get your attention so you may avoid serious injury or death to you and others. Read the Operator's Manual in it's entirety!

Welcome

The cervid livestock industry, which encompasses elk, reindeer, axis, sika, red, whitetail and fallow deer, among others, is one of the fastest growing industries in rural America.¹

Whether you're a farmer, rehaber or just a wildlife enthusiast, this feeder provides several advantages. Not only will it help prevent feed loss from rainfall, but also allows you select desired feeding schedule.

NOTE: *Be familiar with regulations and ordinances pertaining to wildlife in your area. Laws and licences required for interaction with wildlife vary from state to state. Check with your territory's Federal, State and Provincial Wildlife Agencies to find out what regulations apply to you. See the appendix for a list of some wildlife agencies.*



Priefert Manufacturing maintains an ongoing program of continuous product improvement. Therefore, Priefert reserves the right to make improvements in design or specification changes without incurring any obligation to replace said items on units previously sold.

There is a possibility that some illustrations in our manuals were of prototype models. Design of production models may vary in detail from those shown in our manuals.



REMEMBER SAFETY FIRST!

Be Alert - Eliminate unsafe habits and risky behavior, recognize hazards as they exist and read and follow the Operator's Manual for your Wildlife Feeder.

Getting Started

This manual provides information necessary to effectively operate your Wildlife Feeder. This manual also provides manufacturer's recommendation of proper use and operation.

The information presented in this operator's manual is applicable only to the model of Wildlife Feeder at time of purchase. Contact your authorized dealer or manufacturer for any additional information.

Terminology

"Right" or "Left" as used in this manual is determined by facing the rear of the Feeder, looking forward, unless otherwise stated. This would indicate the Control Box to be on the RIGHT side.

"NOTE:" provides the operator a brief summary of information that will assist in operating the equipment.

"IMPORTANT:" denotes that the following content has significance in the operation or maintenance of the equipment.

Owner Assistance

Please contact your Priefert Wildlife Equipment Dealer if you have any questions regarding your Priefert Automated Wildlife Feeder, need repairs, or need to order replacement parts.

The parts on your Wildlife Feeder have been specifically designed and should only be replaced with approved Priefert Manufacturing parts.

Customer Service

Contact your Priefert Wildlife Equipment Dealer to discuss any issues that you may be experiencing. Allow them the opportunity to assist in correcting any problems, or answer questions that you may have.

For further assistance, contact:

Priefert Manufacturing
Attention: Customer Service
2630 South Jefferson
P.O. Box 1540
Mount Pleasant, Texas 75456-1540
1-800-527-8616

www.priefert.com
sales.priefert.com

Date of Purchase: _____

Serial Number: _____

Table of Contents

Welcome	ii
Getting Started	ii
Terminology	ii
Owner Assistance.	ii
Customer Service.	ii
Safety	2
Safety Alert Symbols	2
Operator Safety.	2
Wildlife Safety	2
Zoonotic Diseases	2
Signal Words	2
Additional Safety Information	3
Automatic Feed Trough Door.	3
Main Hopper & Hopper Cover	3
Safety Labels	4
Component Functions	5
Specifications	6
AWF300	6
AWF1000.	7
Location & Operation	8
Locating the Feeder.	8
Rain Sensor.	8
Solar Panel	8
Optimum Tilt of Solar Panel	8
Seasonal Storage Procedures	8
Timer Settings	9
Setting the Clock and Geographic Coordinates	9
Toggling the Trough	9
Activating the Spinfeeder.	9
Selecting a Preset	9
Set-Up Custom Mode Presets	9
Custom Mode Timer Settings.	9
Available Preset Modes.	8
References	10
Suggested References	10
Appendix	10
Warranty	11

Safety



Safety Alert Symbols

The **SAFETY ALERT SYMBOL** indicates there is a potential hazard to personal safety involved and extra safety precaution must be taken. When you see this symbol, be alert and carefully read the message that follows it. In addition to design and configuration of equipment, hazard control and accident prevention are dependent upon the awareness, concern, prudence and proper training of personnel involved in the operation, transport, maintenance and storage of equipment.

Owner/operator can prevent and is responsible for accidents or injuries occurring to other people, themselves, wildlife and/or property and equipment.

Thoroughly read and understand the operator's manual, references and other material supplied with the Priefert Automated Wildlife Feeder. If the operator cannot read English, it is the owner's responsibility to explain this material to them. This publication is available as a special request in other languages.

Refer to the "Safety Label section" read all instructions noted on them.

We strongly recommend that children are not allowed to operate equipment. Priefert recommends keeping the Hopper cover locked wherever children have access to the location of the feeder.

Do not allow untrained people to operate or service equipment.

Be aware of potential hazards pertaining to the interaction and handling of livestock and wildlife before using this equipment.

Operator Safety

- Operator must be familiar with these instructions and functions of the Automated Wildlife Feeder before use.
- Inspect the area where the equipment is to be used and assess the feasibility of proper operation prior to locating the Feeder.
- Never locate the Feeder on unstable or unlevel surfaces. A full Feeder can weigh in excess of 1000 lbs.
- Visually inspect the Feeder for branches, brush or obstructions which may impede the operation of the equipment. Turn off power and remove obstructions before operation.
- Turn off power before performing any maintenance or repairs to this equipment to prevent serious injury.
- Inspect the Feeder before operation and when servicing. Be sure hardware is tight. Repair or replace damaged, badly worn, or missing parts.
- Be sure guards and shields are in good condition and secured before operating the equipment. Make any necessary adjustments before operation.
- Entanglement in moving parts can cause death or serious injury. Use caution around doors and moving panels.
- Be familiar with innate dangers of livestock and wildlife.

Wildlife Safety

- Wild animal attacks on humans are quite rare, but they do happen. Be aware of surroundings while servicing the Feeder.
- Dealing with potential wildlife encounters is a big part of personal safety. A diversity of wild animals are present in natural areas throughout the country, so before locating the Feeder, familiarize yourself with the indigenous species in the area.
- Any food source will attract a variety of animals and insects. Available food can attract unintended or nuisance animals, and, biting or stinging insects. Use caution when servicing your Feeder for animals and/or insects under, on, or inside the Feeder.
- Never handle or attempt to handle any wildlife unless you are trained and/or licensed to do so.
- Be cautious of any animals acting erratically or aggressively, this could be signs of disease or infection.²
- Watch for snakes which may be attracted by vermin eating spilled or scattered feed.

Zoonotic Diseases

Zoonotic diseases are those diseases shared by animals and humans. Approximately 150 zoonotic diseases are known to exist. Wildlife serves as a reservoir for many diseases common to domestic animals and humans. Persons working with wildlife should be alert to the potential for disease transmission from animals.

Neither animal handlers nor the general public have reason to be alarmed or frightened, but everyone should respect the potential for disease transmission and use sound preventive measures. Generally, disease is more easily prevented than treated. Many zoonotic diseases are so common in nature, so rare in humans, or so mild in their symptoms, that wild animals pose only a minimal health risk to people.²

- Always wear protective clothing (i.e. rubber gloves, long sleeves, filter mask, etc.) when cleaning, servicing or performing maintenance on the Feeder.
- Always wear protective clothing when working in proximity of wildlife.
- Many diseases are transmitted through parasites or insects, not necessarily the host animal. Take appropriate measures to avoid these transmissions.
- Proper insect control of monitored wildlife can be a deterrent to infestation.
- Thoroughly wash and disinfect minor wounds, abrasions, and skin lesions where the skin is broken to prevent bacterial infections.
- Be cautious of any animals acting erratically or aggressively, this could be signs of disease or infection.²

BE AWARE OF SIGNAL WORDS: A signal word designates a degree of level of hazard seriousness.

NOTE: Provides helpful information to the operator.

IMPORTANT: Indicates failure to observe may cause damage to equipment.

WARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.³

CAUTION: Indicates an imminently hazardous situation, which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.³

DANGER: Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations, typically for machine components that, for functional purposes cannot be guarded.³

Additional Safety Information


WARNING:  Many operations of this equipment could be hazardous, cause injury or death, if care is not taken during use and maintenance. **BE SURE TO READ ALL WARNING INFORMATION BELOW AND ENTIRE OPERATORS MANUAL PRIOR TO USING THIS EQUIPMENT.**

Automatic Feed Trough Door:

- **NEVER PUT HANDS OR FEET INSIDE THE FEED TROUGH WITHOUT TURNING OFF POWER TO THE SYSTEM.** This automatic door is designed to open or close on a programmed sequence, OR if there is sufficient moisture or rain to activate the rain sensor.
- **NEVER ATTEMPT TO CLEAN OR SERVICE THIS EQUIPMENT WITHOUT TURNING OFF POWER TO THE SYSTEM.** Hand or body contact with the rain sensor could activate the Feed Trough Door causing it to close unexpectedly. Hands, feet, cleaning supplies or other objects placed in the Feed Trough could become trapped causing damage to the system or personal injury.
- **ALWAYS STAND CLEAR OF THE FEED TROUGH DOOR WHEN OPENING.** It is possible that animals or insects have gotten inside the trough while the Feeder was unattended and door was open, then trapped when the door closed. **ALWAYS** assume there could be animals, vermin, reptiles, birds, or insects that have become trapped and will attempt to escape when the door opens.

Main Hopper and Hopper Cover

- **ALWAYS WEAR PROTECTIVE CLOTHING WHEN PERFORMING ANY SERVICE OR MAINTENANCE.** Gloves always help prevent unforeseen injury from sharp edges, pinch-points, animal urine or fecal matter as well as insect bites and stings. A **filter mask** is recommended to prevent exposure to grain and feed dust. A **long-sleeved shirt** will aid in preventing irritation from feed exposure and help prevent unexpected contact with some bacterial, fungal or parasitic accumulations.
- **NEVER STAND ON ANY SURFACES OF THE FEEDER.** This equipment was not designed to support the weight of a person on struts, braces, panels or covers.
- **ALWAYS BE SURE FEEDER IS ON STABLE, LEVEL GROUND.** Shifting of the Feeder could occur during filling from the increase in weight of the feed, causing the Hopper Cover to close rapidly and unexpectedly.
- **NEVER CLIMB INSIDE THE MAIN HOPPER.**
- **NEVER PUT HEAD OR HANDS OVER TOP EDGE OF HOPPER WHEN FILLING OR SERVICING.**
- **ALWAYS BE SURE HOPPER COVER IS FULLY OPEN WHEN FILLING OR SERVICING.** Hopper Cover could accidentally close rapidly if Feeder suddenly shifts or unexpected high wind are encountered. Block Cover open during servicing to prevent accidental closure of Hopper Cover.

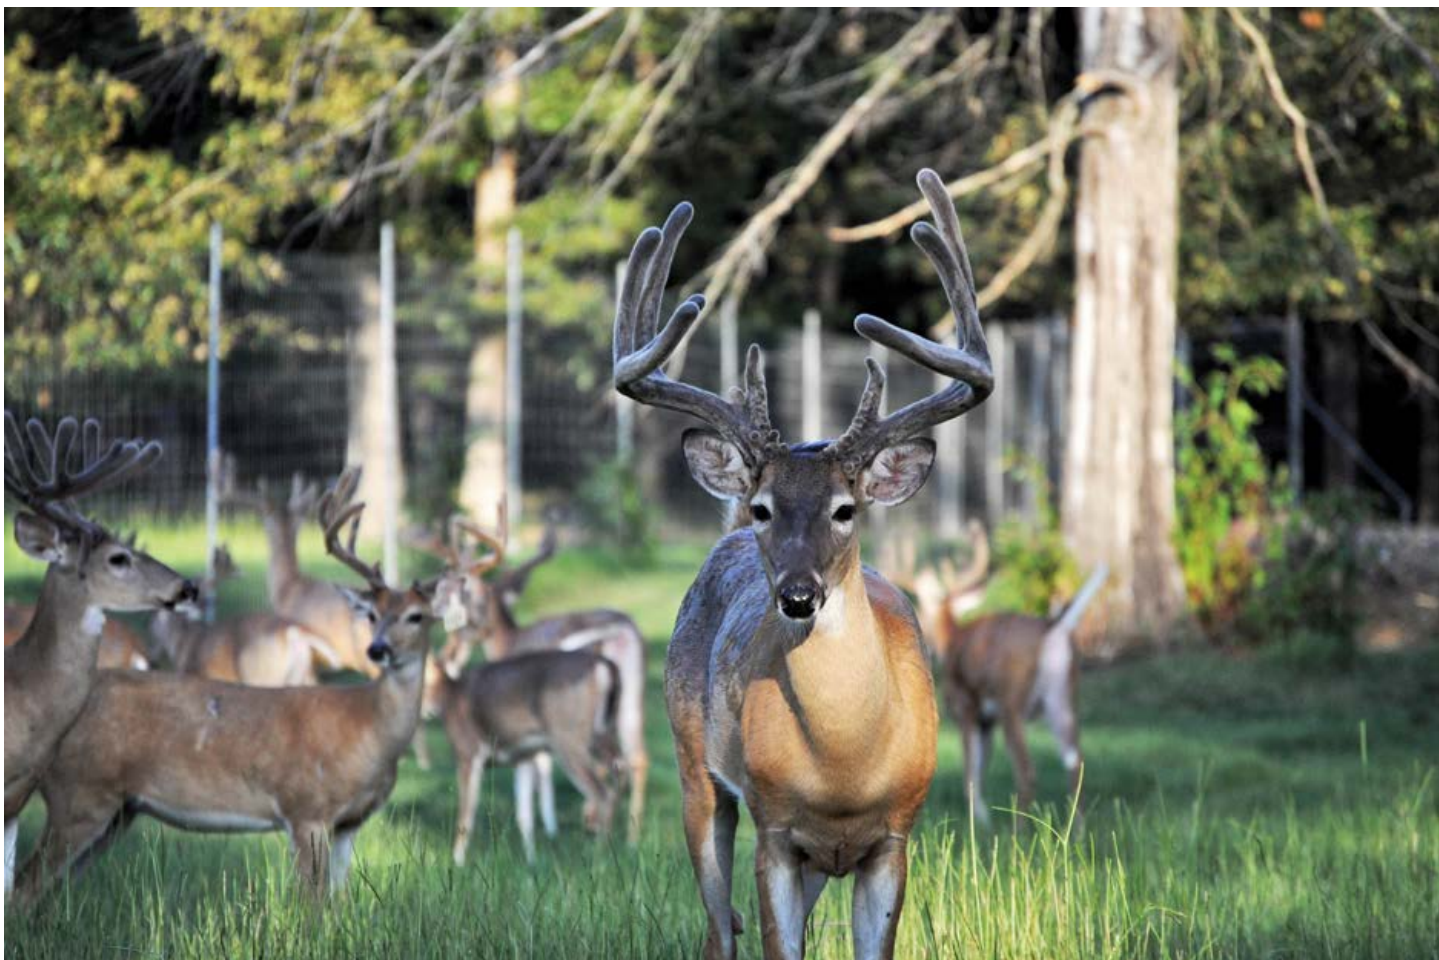

Safety Labels

Your Priefert Automated Wildlife Feeder comes equipped with all safety labels in place. They were designed to help you safely operate your implement.

Read and follow their directions:

- Keep all safety labels clean and legible.
- Replace all worn, damaged or missing labels. To order new labels contact our sales department.
- Some new equipment installed during repairs may require new safety labels to be affixed to the replacement component. When ordering new components make sure the correct safety labels are included in the request.

To install new labels:

- a) Spray water on the surface where the label is to be placed and wipe dry.
- b) Peel backing from the label.
- c) Press firmly onto the surface.
- d) Squeeze out air bubbles with the edge of a credit card.

Standard Safety Labels:

WARNING - Pinch Points

CAUTION - Spinner Discharge Stand Clear

NO STEP





NO STEP



Solar Panel Provides charging to the battery to power the Feeder around the clock. See page 8 for detailed description.	
Rain Sensor Activates closure of Feed Trough Door to prevent wasted feed because of rain. See page 8 for detailed description.	
Control Box Activates Trough Door and Spinner operations, handles multiple pre-programmed Event Sequences. See page 9 for Function and Programming.	
Trough Door Opens & closes manually or from pre-programmed Event Sequences to regulate access to feed and prevent rain saturation. See page 9 for operation.	
Broadcast Spinners Disperses feed manually and during Event Sequences to regulate and spread feed over specific areas. See page 9 for operation.	
Support Skids Provides even weight distribution of Feeder and Assists Relocation of Empty Feeder. See page 8 for information on proper location.	

AWF300

Maximum Capacity 300 lbs.

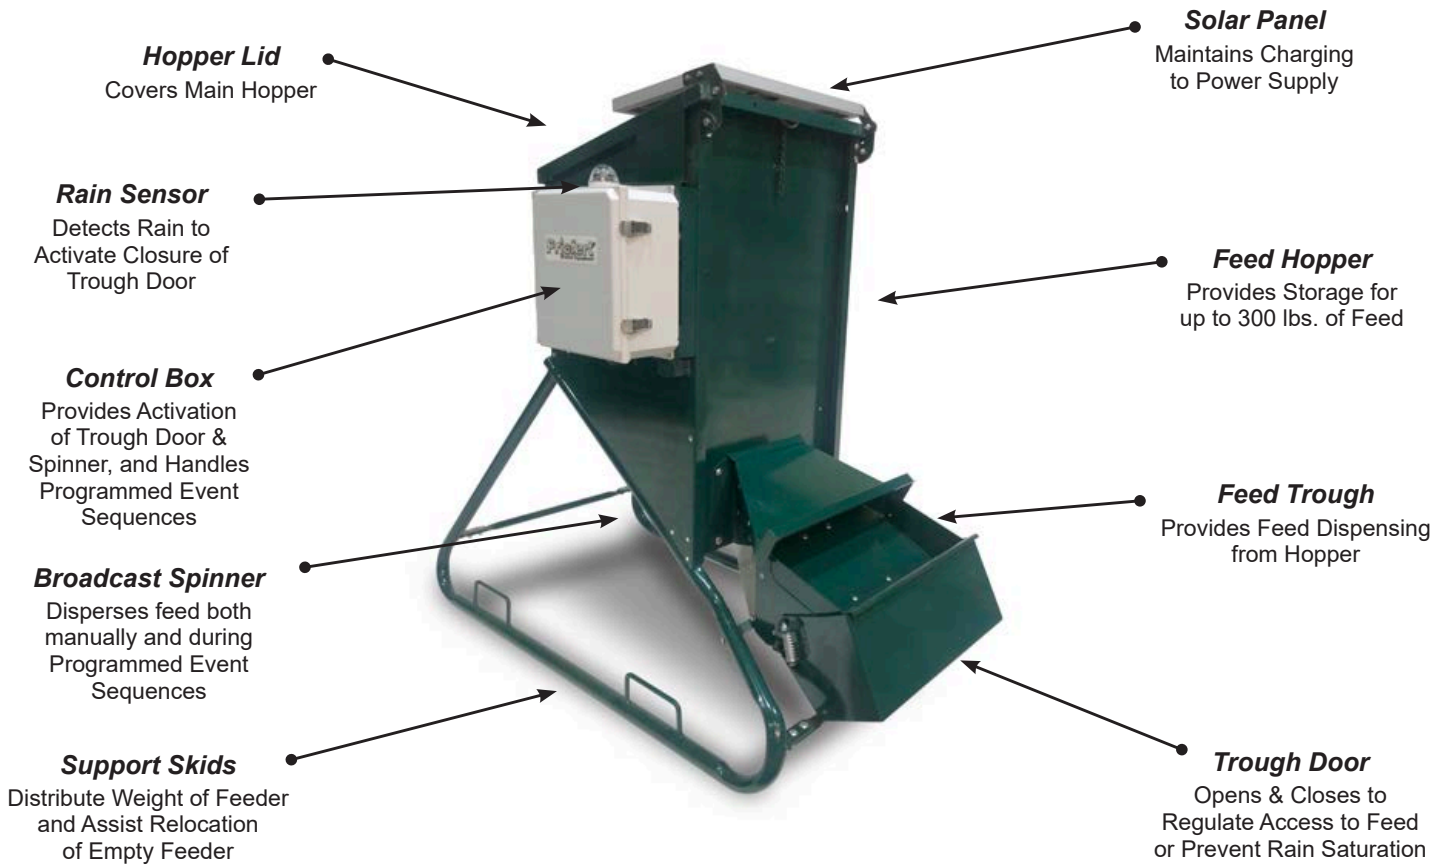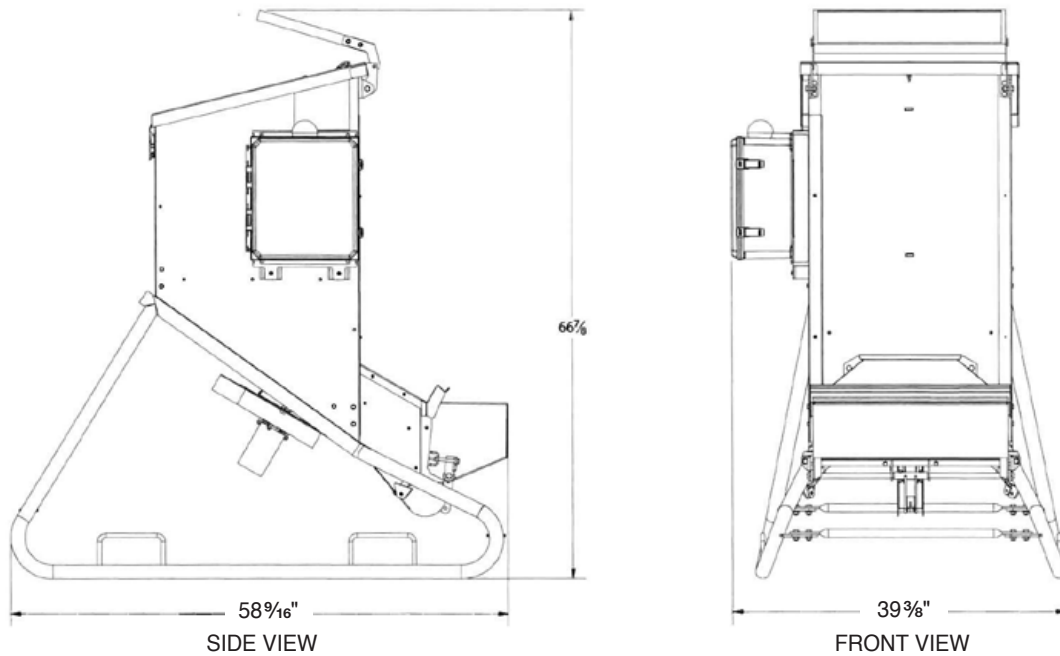


NOTE: This section has been included to help identify specific parts and provide specifications of the AWF300 & AWF1000 Wildlife Feeders referred to in this manual.

Please read and familiarize yourself with the proper operations and functions of the Feeder as described in this manual prior to use.

AWF1000

Maximum Capacity 1000 lbs.

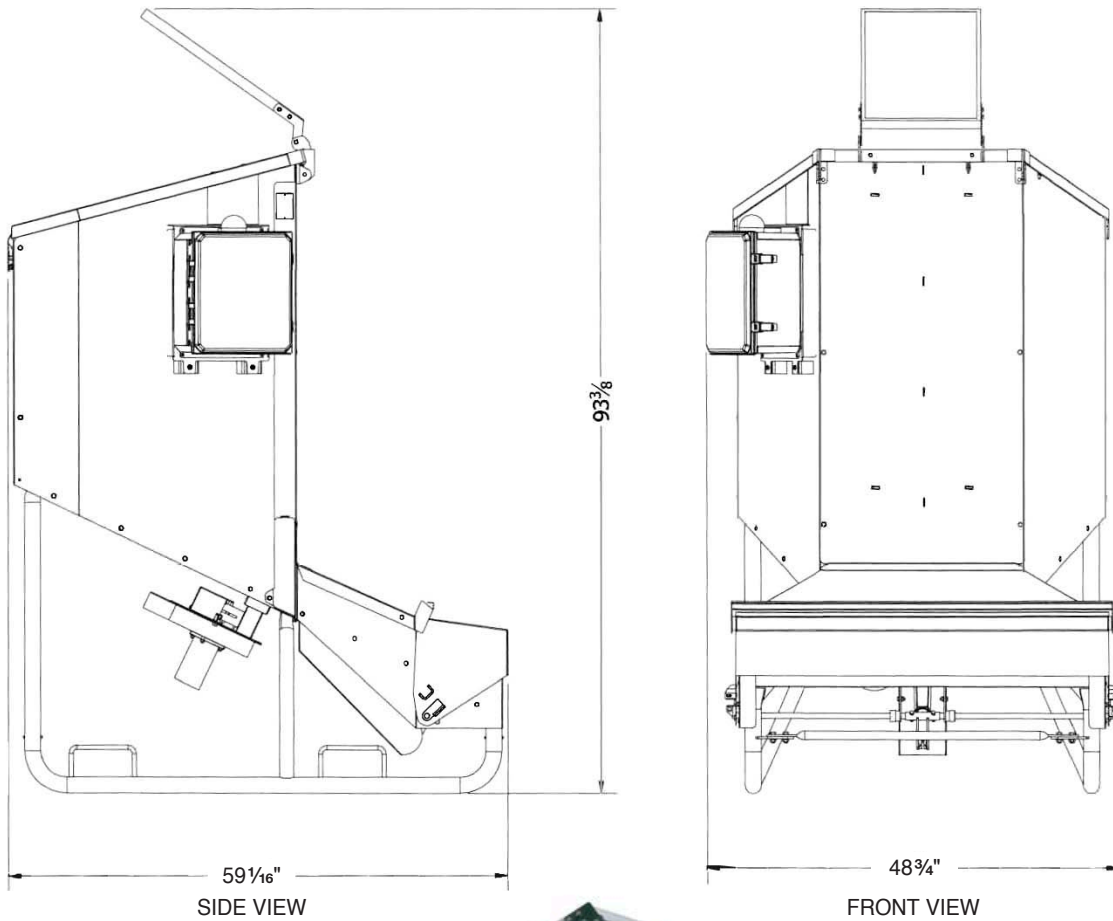

Hopper Lid
Covers Main Hopper

Rain Sensor
Detects Rain to
Activate Closure of
Trough Door

Control Box
Provides Activation of
Trough Door & Spinner,
and Handles Programmed
Event Sequences

Broadcast Spinner
Disperses feed both
manually and during
Programmed Event
Sequences

Support Skids
Distribute Weight of Feeder
and Assist Relocation
of Empty Feeder

Solar Panel
Maintains Charging
to Power Supply

Feed Hopper
Provides Storage for
up to 1000 lbs. of Feed

Feed Trough
Provides Feed Dispensing
from Hopper

Trough Door
Opens & Closes to
Regulate Access to Feed
or Prevent Rain Saturation



Location & Operation



CAUTION:

Prevent Damage! Never attempt to relocate the Wildlife Feeder when loaded with feed. EMPTY FEEDER BEFORE ATTEMPTING TO RELOCATE. Moving the feeder when it has feed loaded can damage feeder, void warranty and cause personal injury.

Locating the Feeder

Since the Feeder is Solar powered, attempt to locate the Feeder away from tree cover or obstructions that could prevent direct, full-day sunlight. This will allow the solar panel to maintain a charge to the battery which provides power to operate the Trough Door. (See **Solar Panel**)

Be sure that the selected location is level and the ground is firm and stable. If there is any question as to whether the area is suitable, it is best to choose another more suitable location. Remember that the Feeder can hold several hundred pounds of feed. Unsuitable locations can cause the Feeder to slide, shift or sink, preventing the proper operation and can interfere with Event Sequences.

Be sure to have the Feeder in its final location prior to adding feed. After determining a location for the Feeder, drag into position in the direction of the skids, never sideways.

NOTE: If possible, attempt to locate the Feeder so the Solar Panel can capture the most sunlight. (See **Solar Panel**)

Rain Sensor

Function and Maintenance

The RG-11 Rain Sensor detects when rain drops hit the outside surface, and determines the size of the rain drops that fall on it.

It is optical -- not mechanical or conductive. Consequently, it is far more rugged, sensitive and reliable than any other technology. The sensor is extremely sensitive, and virtually immune to false trips. And, it is completely unaffected by jostling and motion. There are no exposed conductors to corrode, and no openings for bugs to crawl into. There is no place for leaves or other debris to collect.

The circuitry and Digital Signal Processing detect tiny rain drops, and reject the effects caused by dirt, contaminants, aging, and other factors. The system can detect individual drops of under half a millimeter.

A built-in low power (0.25W) heater extends the operation of the Sensor to freezing (32 F or 0 C). Note that this is a very modest amount of power; it will tend to drive off a small amount of frost, but will not melt ice.



WARNING:

Avoid injury! Contact with the rain sensor could activate the Feed Trough Door causing it to close unexpectedly. Keep hands, feet, and other objects clear of the Feed Trough door to prevent damage to the system or personal injury.

Solar Panel

Function and Maintenance

Power for the Wildlife Feeder is supplied from a 12 volt battery, charged by a 20 watt Solar Panel. The Solar Panel charges the battery during daylight hours in order to perform Event Sequences during evening, night or pre-dawn hours. Charging to the battery, and power to the Feeder is regulated by the Solar Charge Controller within the Control Box.

Optimum Tilt of Solar Panels

To achieve the best performance from your Feeder's solar panel, it should be angled to capture the most sunlight. Remember that the angle of the Solar Panel can make a marked difference in it's charging ability. At different times of the year, the sun is at different angles on the horizon. Be sure to adjust your Solar Panel to get the most energy over the whole year.

Visit <http://www.solarpaneltilt.com/> to find the best tilt angle for your location.

Seasonal Storage Procedures:

Follow these procedures for storage of Feeder for extended periods:

- Open Trough cover.
- Turn off the Power Switch inside the Control Box.
- Remove majority of feed from main bin.
- Remove remainder of feed through and from trough.
- Use disinfectant to wipe remainder of feed from all inside surfaces.
- Turn Power back on and close trough door.
- Turn Power Switch off to store.



WARNING:

Avoid injury! Keep hands and feet clear of moving door. Door may close at any time without warning. Be sure to turn off power before cleaning trough, bin or performing any service to feeder.



CAUTION:

Avoid injury! Animals and/or insects may be inside feeder. Visually inspect any location on the feeder before attempting to clean or service main feed bin or trough. Animals and/or insects are attracted by feed and may get inside feeder. Never put hands inside feeder without observing the area first.

Timer Settings



CAUTION:

Injury may occur due to movement of feeder parts! Keep hands and feet away from moving parts during programming and operation. Trough door and/or motors may move at any time without warning per programmed settings.

To Set the Clock and Geographic Coordinates*

From the home screen, press and hold "✓" until the "Set the Date" screen appears. Use the "<" and ">" buttons to adjust the flashing unit of time and press "✓" to continue to the next option until all options have been configured. Press "✓" to save settings and return to home screen.

*Geographic coordinates are set as default to Mt. Pleasant, TX (33.1°N, -95.0°W).

To Toggle the Trough Position

From the home screen, press the ">" button for two seconds to toggle the trough state.

To Activate the Spinfeeder

From the home screen, press the "<" button for two seconds to activate Spinfeeder.



WARNING:

Avoid injury! Be sure all people and animals are clear before activating spinner.

To Set the Spinfeeding Duration

From the home screen, press and hold the "↺" button until the Spinfeeding Duration screen appears. Configure the duration using the "<" and ">" buttons. To make faster adjustments, press and hold the button. Press "✓" to save and return to the home screen.

To Select a Preset


Press the "✓" button to choose a Preset Mode. Use the "<" and ">" buttons on the "Use Preset Mode" screen to scroll between the different presets. (See table below for available Presets). All Preset Modes close trough when rain is detected. Select "Custom" to set other feeding times not available in presets. (See "Custom Mode Timer Settings")

To Review Programming

From the home screen, tap the "<" or ">" button to scroll through information about your feeder's programmed functions. Press the "✓" button or "↺" button to return to the home screen. If you've defined custom operation, use the "✓" button to view information about the modes you've programmed.

Typical Home Screen in "Hunter 1" Mode

"↺" button will always return to the home screen

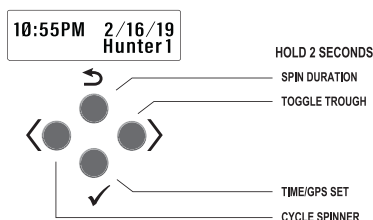

To Setup Custom Mode Preset Feeding Times

Press the "✓" button to "Pick a Preset" screen. Press the "✓" button again to confirm. Press the "<" or ">" button to toggle to the Custom Mode Preset. Press the "✓" button to select.

Press the "✓" button **again** to "Pick a Preset" screen, **then press** "<" or ">" to toggle to desired Timer.

Press the "✓" button to select desired Timer. When selected, press "<" or ">" buttons to edit options for that specific Timer.

(See "Custom Mode Timer Settings")

CUSTOM MODE TIMER SETTINGS:

Trough Timer:

Press the "✓" button. Use "<" or ">" to adjust "#Feedings/day".

Press the "✓" button, then use "<" or ">" to adjust time to Open.

Press the "✓" button, then use "<" or ">" to adjust time to Close.

Repeat setting time for additional Feedings.

Press the "✓" button to save and complete Trough Timer sequence.

Press the "↺" button to return to the home screen.

Trough GeoTimer:

Press the "✓" button to make GeoTimer Active. Use "<" or ">" to adjust for Sunrise, Sunset, Sunrise & Sunset, All Day, or None.

Press the "✓" button to adjust for Sunrise, then use "<" or ">" to adjust time ± from sunrise to Open.

Press the "✓" button to adjust for Sunset, then use "<" or ">" to adjust time ± from sunrise to Close.

Repeat setting time for additional sequences.

Press the "✓" button to save & complete Trough GeoTimer sequence.

Press the "↺" button to return to the home screen.

Spinner Timer

Press the "✓" button. Use "<" or ">" to adjust #Feedings/day.

Press the "✓" button, then use "<" or ">" to adjust feed time of day.

Press the "✓" button, then use "<" or ">" to adjust spin duration.

Repeat settings for additional Feedings.

Press the "✓" button to save and complete Spinner Timer sequence.

Press the "↺" button to return to the home screen.

Spinner GeoTimer

Press the "✓" button. Use "<" or ">" to adjust #Feedings/day.

Press the "✓" button to adjust for Sunrise, then use "<" or ">" to adjust time ± from sunrise to Open.

Press the "✓" button to adjust for Sunset, then use "<" or ">" to adjust time ± from sunrise to Close.

Press the "✓" button, then use "<" or ">" to adjust spin duration.

Repeat settings for additional Feedings.

Press the "✓" button to save & complete Spinner GeoTimer sequence.

Press the "↺" button to return to the home screen.

AVAILABLE PRESET MODES

Mode	Trough Open	Trough Close	Trough Open	Trough Close	Spin	Spin
Hunter 1	Sunrise - 1 Hour	Sunrise +3 Hours	Sunset - 3 Hours	Sunset + 1 Hour	Sunrise - 1 Hour	Sunset - 1 Hour
Hunter 2	Sunrise - 1 Hour			Sunset + 1 Hour	Sunrise - 1 Hour	Sunset - 1 Hour
Grower 1	Sunrise - 1 Hour	Sunrise +3 Hours	Sunset - 3 Hours	Sunset + 1 Hour		
Grower 2	Sunrise - 1 Hour			Sunset + 1 Hour		
Stay Dry	Always	When Raining				
Custom	See information above to set-up Custom Preset					

References

1. <http://modernfarmer.com/2014/02/deer-farming-next-adventure-agriculture/>
2. http://wildliferehabinfo.org/Zoonoses_MnPg.htm
3. Sentry Insurance, FEMA, Owner's and Operators Manuals for Farm Equipment, Sentry Insurance, Stevens Point, WI, revised Management Bulletin No. 112, 90-42; March 2007, pp S-2.

Suggested References

1. Centers for Disease Control and Prevention, CDC; "HAZARDS TO OUTDOOR WORKERS"; <http://www.cdc.gov/niosh/topics/outdoor/>
Wallmo, O. C. 1978. Mule and black-tailed deer. J. L. Schmidt and D. L. Gilbert, eds. Big game of North America: ecology and management. Stackpole Books, Harrisburg, Pennsylvania.
Mackie, R. J., K. L. Hamlin, and D. F. Pac. 1982. Mule deer. J. A. Chapman and G. A. Feldhamer, eds. Wild mammals of North America: biology, management and economics. The Johns Hopkins Univ. Press, Baltimore, Maryland.
2. "Optimum Tilt of Solar Panels", <http://www.solarpaneltilt.com/>

Appendix

Federal, State and Provincial Wildlife Agencies

These are phone numbers and website addresses of some state and provincial wildlife agencies. This is by no means a complete list, and is current as of January 2015.

USDA Forest Service (202) 205-8333 www.fs.fed.us	Kansas Department of Wildlife and Parks (620) 672-5911 www.kdwp.state.ks.us	New York Department of Environmental Conservation (518) 402-8843 www.dec.state.ny.us
U.S. Fish and Wildlife Service (800) 344-WILD www.fws.gov	Kentucky Department of Fish and Wildlife Resources (800) 858-1549 fw.ky.gov	Ohio Department of Natural Resources (614) 265-7040 www.dnr.state.oh.us
Animal Behavior Institute (866) 755-0448 http://www.animaledu.com	Louisiana Department of Wildlife & Fisheries (225) 765-2350 www.wlf.louisiana.gov/	Oklahoma Department of Wildlife Conservation (405) 521-2730 www.wildlifedepartment.com
Alberta Sustainable Resource Development (780) 427-2711 www.srd.gov.ab.ca/	Massachusetts Division of Fisheries & Wildlife (508) 389-6300 www.mass.gov/masswildlife	Ontario Ministry of Natural Resources (800) 667-1940 www.mnr.gov.on.ca/MNR
Alabama Department of Conservation and Natural Resources (334) 242-3467 www.outdooralabama.com	Manitoba Conservation Wildlife and Ecosystem Protection Branch (800) 214-6497 www.gov.mb.ca/conservation/wildlife	Oregon Department of Fish & Wildlife (503) 947-6300 www.dfw.state.or.us
Arkansas Game & Fish Commission (800) 364-4263 www.agfc.state.ar.us	Maryland Department of Natural Resources (410) 260-8540 www.dnr.state.md.us	Pennsylvania Game Commission (717) 787-2084 www.pgc.state.pa.us
Arizona Game & Fish Department (602) 942-3000 www.azgfd.com	Maine Department of Inland Fisheries & Wildlife (207) 287-8000 www.state.me.us/ifw	Quebec Ministry of Natural Resources and Wildlife (418) 521-3830 www.mrnf.gouv.qc.ca/english/home.jsp
British Columbia Ministry of Environment Fish and Wildlife Branch (800) 663-7867 www.env.gov.bc.ca/fw/	Michigan Department of Natural Resources (517) 373-1263 www.michigan.gov/dnr	Rhode Island Department of Environmental Management (401) 789-0281 www.dem.state.ri.us
California Department of Fish & Game (916) 445-0411 www.dfg.ca.gov	Minnesota Department of Natural Resources (888) 646-6367 www.dnr.state.mn.us	South Carolina Department of Natural Resources (803) 734-3886 www.dnr.state.sc.us
Colorado Division of Wildlife (303) 297-1192 www.wildlife.state.co.us	Missouri Department of Conservation (573) 751-4115 www.missouriconservation.org	South Dakota Game, Fish & Parks (605) 773-3485 www.sdgifp.info
Connecticut Department of Environmental Protection (860) 642-7239 www.dep.state.ct.us	Mississippi Wildlife, Fisheries & Parks (800) 5GO-HUNT www.mdwfp.com	Tennessee Wildlife Resources Agency (615) 781-6500 www.state.tn.us
Delaware Department of Natural Resources (302) 739-5297 www.dnrec.state.de.us	Montana Fish, Wildlife & Parks (406) 444-2535 www.fwp.state.mt.us	Texas Parks & Wildlife Department (800) 792-1112 http://www.tpwd.state.tx.us/
Florida Fish and Wildlife Conservation Commission (850) 488-4676 www.myfwc.com	North Carolina Wildlife Resources Commission (919) 733-7291 www.ncwildlife.org	Utah Division of Wildlife Resources (801) 538-4700 www.wildlife.utah.gov
Georgia Dept of Natural Resources Wildlife Resources Division (770) 918-6416 www.gohuntgeorgia.com	North Dakota Game & Fish Department (701) 328-6300 gf.nd.gov	Virginia Department of Game & Inland Fisheries (804) 367-1000 www.dgif.state.va.us
Hawaii Department of Land and Natural Resources (808) 587-0166 www.state.hi.us/dlnr	Nebraska Game & Parks Commission (402) 471-0641 www.OutdoorNebraska.org	Vermont Fish & Wildlife Department (802) 241-3700 www.anr.state.vt.us/
Iowa Department of Natural Resources (515) 281-5918 www.iowadnr.gov	New Hampshire Fish & Game Department (603) 271-3422 www.wildlife.state.nh.us	Washington Department of Fish & Wildlife (360) 902-2515 www.wdfw.wa.gov
Idaho Fish & Game (208) 334-2920 www.fws.gov/idaho/	New Jersey Division of Fish and Wildlife (908) 735-8793 www.state.nj.us/dep/fgw	Wisconsin Department of Natural Resources (608) 266-2621 www.dnr.state.wi.us
Illinois Department of Natural Resources (217) 782-7305 www.dnr.state.il.us	New Mexico Game & Fish (505) 476-8000 www.wildlife.state.nm.us	West Virginia Division of Natural Resources (304) 558-2771 www.wdnr.gov
Indiana Division of Fish and Wildlife (317) 233-4976 www.wildlife.in.gov	Nevada Department of Wildlife (775) 688-1500 www.ndow.org	Wyoming Game & Fish Department (307) 777-4600 gf.state.wy.us/

Limited Warranties:

Priefert Manufacturing Company, Inc., ("Priefert") 2630 South Jefferson, P.O. Box 1540, Mount Pleasant, TX 75456-1540, warrants for one (1) year from the purchase date to the original non-commercial, governmental, or municipal purchaser ("Purchaser") and warrants for six (6) months to the original commercial or industrial purchaser ("Purchaser") that the product purchased are free from defects in material or workmanship. Priefert will replace or repair, free of charge to the original purchaser any part(s) found, upon examination at our factory, to be defective under normal use and service due to defects in material or workmanship, provided that the original purchaser:

- a. Notifies Priefert in writing of any defect in material or workmanship within the above specified warranty period.
- b. Returns must be routed through an authorized Priefert dealer or distributor from whom the purchase was made.
- c. Purchaser is responsible for cost of shipping.

In no event will Priefert be held liable under this warranty unless written notice is received and failure must have occurred within the warranty period. Genuine Priefert replacement parts and components will be warranted for 90 days from date of purchase, or the remainder of the original equipment warranty period, whichever is longer.

This limited warranty does not apply to any part of the product which has been subjected to improper or misintended use, negligence, alteration, modification, or accident, damaged due to lack of maintenance or use of wrong oil or lubricants, or repairs that have been made with parts other than those obtainable through Priefert, or which has served its usual life. This limited warranty does not apply to any expendable item such as blades, shields, guards, or pneumatic tires, or other trade accessories since these items are warranted separately by their respective manufacturers, except as specifically noted in your Operator's Manual.

Except as provided herein, no employee, agent, Dealer, or other person is authorized to give any warranties of any nature on behalf of Priefert. Only Priefert is authorized to make any representation to the purchaser concerning "normal" use and service for its product as described in the Operator's Manual, or in authorized printed materials or stickers affixed to the product.

If after examination of the product and/or part(s) in question; Priefert finds them to be defective under normal use and service due to defects in material or workmanship,

Priefert will:

1. Repair or replace the defective product or part(s); if Priefert has made several reasonable number of attempts in repairing the product and/or part(s) to conform to the warranty; then
2. Priefert will replace part(s) or product.
3. Purchaser is responsible for any labor charges exceeding a reasonable amount as determined by Priefert and for returning product and/or part(s) to the Dealer, whether or not the claim is approved. Purchaser is responsible for the transportation cost for the product or part(s) from the Dealer to the factory.

The choice of remedy shall belong to Priefert. Repair or replacement are the only remedies against Priefert under this limited warranty.

Limitation of Liability:

1. Priefert disclaims any express (except as set forth herein) and implied warranties with respect to the product including, but not limited to, merchantability and fitness for a particular purpose.
2. Priefert makes no warranty as to the design, capability, capacity, or suitability for use of the product.
3. This warranty shall not be interpreted to render us liable for injury or damages of any kind or nature to person or property. Priefert will not be liable for any special, incidental or consequential damages based upon breach of warranty, breach of contract, negligence, strict tort liability, or any other legal theory. Such damages include but are not limited to loss of crops, loss of savings or revenue, cost of capital, loss of use of equipment, facilities or services, down time, expense or loss incurred for labor, supplies, substitute machinery, rental, and claims of third parties including customers, and injury to property.

Supplementary:

1. Proper venue for any lawsuits arising from or related to this limited warranty shall be only in Titus County, Texas.
2. Priefert may waive compliance with any of the terms of this limited warranty, but no waiver of any terms shall be deemed to be a waiver of any other term.
3. If any provision of this limited warranty violates any applicable law and is held unenforceable, then the invalidity of such provision shall not invalidate any other provisions.
4. Applicable law may provide rights and benefits to purchaser in addition to those herein.



2630 South Jefferson P.O. Box 1540 Mount Pleasant, Texas 75456-1540