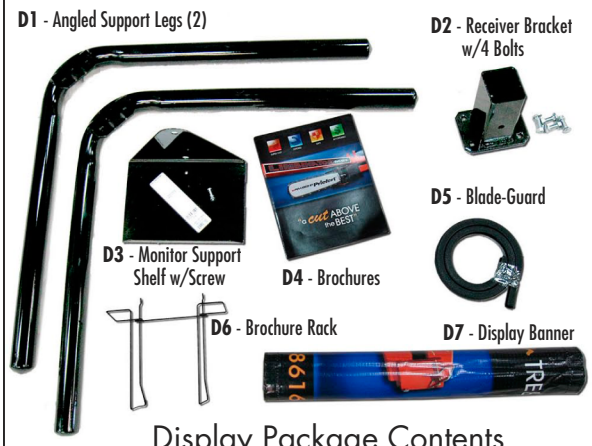
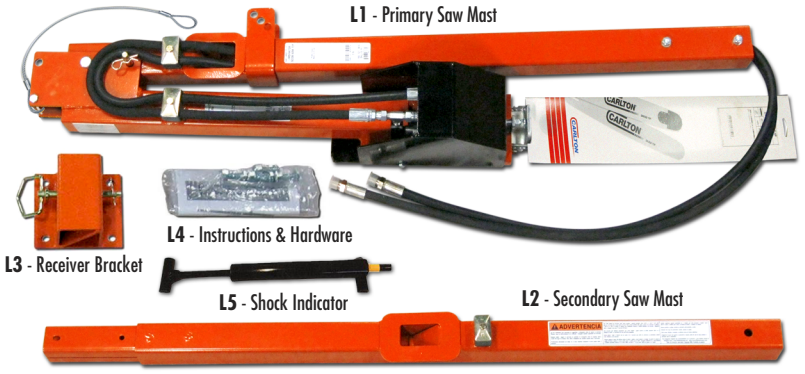


LIMBSAW Display Assembly Instructions

READ AND UNDERSTAND COMPLETE ASSEMBLY INSTRUCTIONS BEFORE BEGINNING ASSEMBLY PROCEDURE



Display Package Contents



LIMBSAW Package Contents

Caution!
Sharp edges and pinch points. Use care during assembly.

NOTE: Be aware that sections of this assembly will require the assistance of an additional individual, due to weight of implement and required procedures. Do not proceed without being familiar with weight of this implement.

Begin by determining location for display. An isle end-cap with approx. 4' x 4' of space will allow ample display space. Assembly will require a 3/4" open-end wrench, 1/2" open-end wrench or adjustable wrench, a blade screwdriver and pliers.

STEP 1: Unpack contents and lay two (2) angled support legs (D1) on floor, with mounting plates up and toward each other. (See Fig 1)

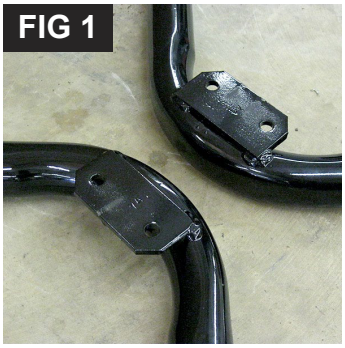
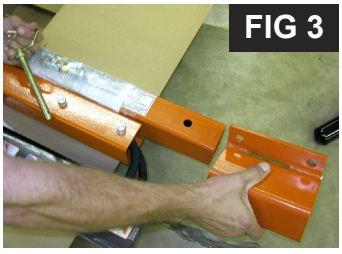

FIG 1


FIG 2

STEP 2: Locate Receiver Bracket (D2) onto support legs and align holes to allow four (4) 3/4" carriage bolts and nuts to securely fasten base supports together. (See Fig 2). Use 3/4" open-end wrench or adjustable wrench to tighten.


FIG 3

STEP 3: Unpack contents of LIMBSAW. Carefully cut strapping bands and separate frame pieces. Locate and remove Receiver Bracket (L3) from Secondary Saw Mast (L2) by removing hitch pin and clevis pin. Return original support base to packing box. (See Fig 3)


FIG 4

STEP 4: Place Secondary Saw Mast (L2) into Receiver Bracket (D2), decal facing forward, and reuse clevis and hitch pins to secure. If arm leans to either side, rotate 180° in base. (See Fig 4)


FIG 5

STEP 5: Remove nuts, washers and bolts from joint end of Primary Saw Mast (L1). Set this hardware aside for assembly of Primary Saw Mast (L1) to Secondary Saw Mast (L2). (See Fig 5)


FIG 6


FIG 6a

CAUTION: Due to weight of implement, and to ease assembly, assistance of another individual will be necessary during the next step.

STEP 6: While supporting Primary Saw Mast (L1), feed hydraulic hoses down into, and out through rear access plate of Secondary Saw Mast (L2). Carefully lower Primary Saw Mast (L1) onto swedge of Secondary Saw Mast (L2).

(See Fig 6, Fig 6a & Fig 6b)


FIG 6b


FIG 7

STEP 7: Remove cardboard blade protector and replace with flexible black Blade-Guard (D5) provided, by starting at one edge and working around blade. Use care to prevent injury on sharp blade edges. (See Fig 7)

STEP 8: Locate Monitor Support Shelf (D3). Mount to assembled arm using bolts, washers and nuts removed from this location in Step 5. Tighten securely. (See Fig 8)


FIG 8


FIG 9

STEP 9: Using 1/2" wrench, loosen bolt from rear hose bracket, locate hydraulic hoses into bracket and retighten. (See Fig 9)

STEP 10: Carefully unpack LCD HDTV/DVD Combo and place onto Monitor Support Shelf (D5). Align hole in base of HDTV and hole in monitor support base. Attach to shelf using 5/16" screw, lock washer and nut and hand tighten. (See Fig 10)

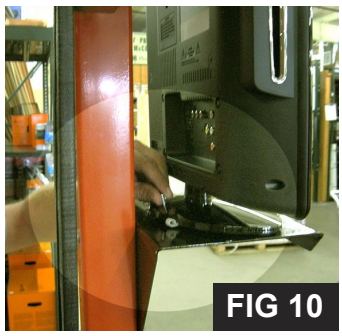

FIG 10


FIG 11

STEP 11: Place power cord into back of HDTV/DVD Combo and secure to arm with zip tie at top and bottom. (See Fig 11). Be sure to read complete instruction manual for HDTV/DVD Combo before plugging unit into local power supply or wall outlet.

STEP 12: Insert Brochure Rack (D6) into holes on front of Monitor Support Shelf (D5). (See Fig 12) Fill with Brochures (D4).

Display as shown placing product behind and beside assembled LIMBSAW.


FIG 12



If you need additional assistance call:

800-527-8616

Mon-Fri 8am-5pm

Priefert® Ranch Equipment

Priefert Manufacturing Company, Inc.
P.O. Box 1540, Mount Pleasant, TX 75456-1540