
10' Priefert®

10' STALL WOOD KIT
• Easy To Install • Tongue & Groove
• Beveled • Thermally Modified

10' PREMIER
HORSE STALL WOOD KIT

PRODUCT #WOOD10

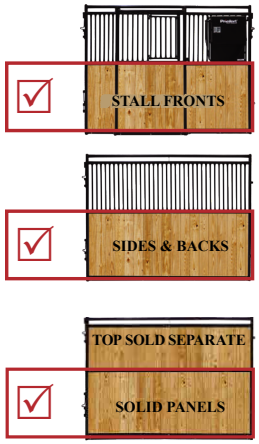



WOOD KIT INSTALLATION INSTRUCTIONS

PRIEFERT RECOMMENDS WEARING GLOVES AND SAFETY GLASSES WHILE INSTALLING THIS WOOD KIT

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED



Being a natural wood product, certain variations in grain, texture and coloration occur. It has been Thermally Modified* to improve strength & durability without chemicals or stains.

THEREFORE, Priefert includes one extra board.

This allows the most desirable pieces to be used. Boards can be flipped top to bottom which allows facing the more desirable side.

Prior to installation, lay-out boards and select the order & sides which provide best overall appeal.

**Apex® chemical-free fortified lumber*

INSTALLATION INSTRUCTIONS CONTINUED

⚠ CAUTION
READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.

Step 1: Using a phillips head screw driver and crescent wrench or socket, remove all bolts from the bottom channels where the wood will be inserted. Loosen, but leave the bottom bolt closest to the door attached in the channel. Separate the channel enough to begin inserting wood.


REMOVE BOLTS


SEPARATE CHANNEL

Step 2: Insert the first board with the grooved edge against the frame and tongue facing out. The grooved side should fit flush against the stall frame. Continue inserting boards, being sure to fit groove of each board onto tongue of previous board.


INSERT BOARDS

Step 3: The last "Full" board must have the tongue removed. Use a saw to cut the tongue off, then insert it into the channel.

Step 4: Butt all boards together, being sure the tongues all lock into the grooves. This leaves a small remaining gap to fill. Measure the width of this gap. Transfer this measurement to the final board.


REMOVE TONGUE

Step 5: Be sure to measure the groove side of the final board and discard the tongue edge. This allows a smooth fit inside the frame of the stall.

Step 6: Rip the final board to the dimension measured, then insert this board into the gap.


MEASURE GAP


INSERT BOARD

Step 7: Reinsert the bottom bolts into the channel and begin tightening. Adjust the boards while tightening, allowing the channel to pull together.

Step 8: With a 3/8" drill bit, drill out the holes to replace the bolts in the upper holes of the bottom channel.

Step 8: Replace and tighten bolts at each of the holes in the channel. Repeat this procedure for all sections of the stall.


DRILL OUT HOLES


REPLACE BOLTS

Thank you for buying a Priefert Wood Kit!

12' Priefert®

12' STALL WOOD KIT
• Easy To Install • Tongue & Groove
• Beveled • Thermally Modified


12' PREMIER
HORSE STALL WOOD KIT

PRODUCT #WOOD12







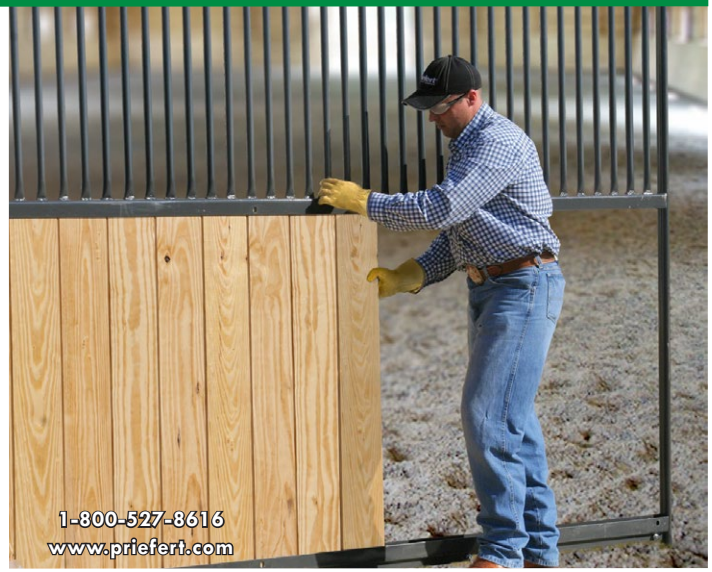

WOOD KIT INSTALLATION INSTRUCTIONS

PRIEFERT RECOMMENDS WEARING GLOVES AND SAFETY GLASSES WHILE INSTALLING THIS WOOD KIT

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED



Being a natural wood product, certain variations in grain, texture and coloration occur. It has been Thermally Modified* to improve strength & durability without chemicals or stains.

THEREFORE, Priefert includes one extra board.

This allows the most desirable pieces to be used. Boards can be flipped top to bottom which allows facing the more desirable side.

Prior to installation, lay-out boards and select the order & sides which provide best overall appeal.

****Apex® chemical-free fortified lumber***

INSTALLATION INSTRUCTIONS CONTINUED


⚠ CAUTION
READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.


REMOVE BOLTS


SEPARATE CHANNEL

Step 1: Using a phillips head screw driver and crescent wrench or socket, remove all bolts from the bottom channels where the wood will be inserted. Loosen, but leave the bottom bolt closest to the door attached in the channel. Separate the channel enough to begin inserting wood.

Step 2: Insert the first board with the grooved edge against the frame and tongue facing out. The grooved side should fit flush against the stall frame. Continue inserting boards, being sure to fit groove of each board onto tongue of previous board.

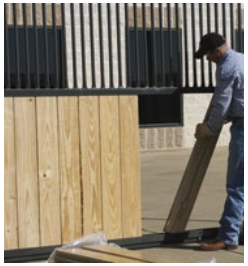
INSERT BOARDS

Step 3: The last "Full" board must have the tongue removed. Use a saw to cut the tongue off, then insert it into the channel.

Step 4: Butt all boards together, being sure the tongues all lock into the grooves. This leaves a small remaining gap to fill. Measure the width of this gap. Transfer this measurement to the final board.


REMOVE TONGUE

Step 5: Be sure to measure the groove side of the final board and discard the tongue edge. This allows a smooth fit inside the frame of the stall.

Step 6: Rip the final board to the dimension measured, then insert this board into the gap.


MEASURE GAP


INSERT BOARD

Step 7: Reinsert the bottom bolts into the channel and begin tightening. Adjust the boards while tightening, allowing the channel to pull together.

Step 8: With a 3/8" drill bit, drill out the holes to replace the bolts in the upper holes of the bottom channel.

Step 8: Replace and tighten bolts at each of the holes in the channel. Repeat this procedure for all sections of the stall.


DRILL OUT HOLES


REPLACE BOLTS

Thank you for buying a Priefert Wood Kit!

TOP ONLY

Priefert®

SOLID TOP WOOD KIT

• Fits 10' & 12' Side/Back Solid Fill Panels
• Beveled • Thermally Modified

10' OR 12' PREMIER HORSE STALL TOP ONLY WOOD KIT

PRODUCT #WOOD-TOP

- TONGUE & GROOVE
- CUT TO LENGTH
- BEVELED FRONT
- STAINED
- SIMPLY RIP THE LAST BOARD FOR A PERFECT FIT EVERY TIME!





SOLID TOP WOOD KIT INSTALLATION INSTRUCTIONS

PRIEFERT RECOMMENDS WEARING GLOVES AND SAFETY GLASSES WHILE INSTALLING THIS WOOD KIT

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED



Being a natural wood product, certain variations in grain, texture and coloration occur. It has been Thermally Modified* to improve strength & durability without chemicals or stains.

THEREFORE, Priefert includes one extra board.

This allows the most desirable pieces to be used. Boards can be flipped top to bottom which allows facing the more desirable side.

Prior to installation, lay-out boards and select the order & sides which provide best overall appeal.

**Apex® chemical-free fortified lumber*


INSTALLATION INSTRUCTIONS CONTINUED

⚠ **CAUTION**

READ AND UNDERSTAND ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING INSTALLATION.

10' OR 12' SOLID WOOD PANEL

(view from inside stall looking out)

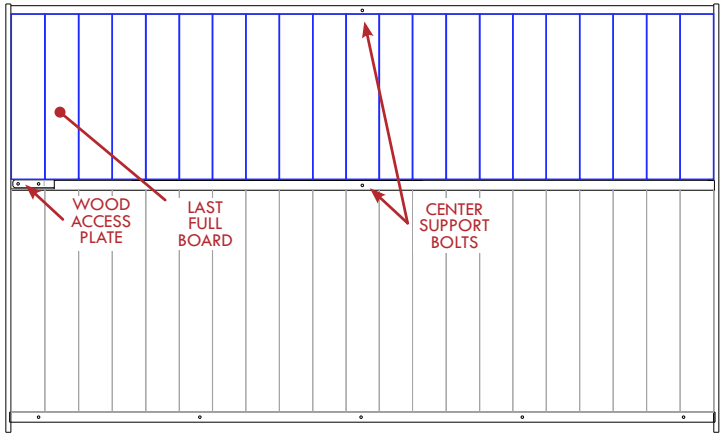

Step 1: Standing inside the stall, Use a phillips head screwdriver to remove the bolts from the Access Plate. Remove top and bottom center support bolts.

Step 2: Insert first board, groove edge first, into the channel and slide to opposite side of stall frame. The grooved side should fit flush against the stall frame. Continue inserting boards, being sure to fit groove of each board onto tongue of previous board.

Step 3: The last "Full" board must have the tongue removed. Use a saw to cut the tongue off, then insert it into the channel.

Step 4: Butt all boards together, being sure the tongues all lock into the grooves. This leaves a small remaining gap to fill. Measure the width of this gap. Transfer this measurement to the final board.

Step 5: Be sure to measure the groove side of the final board and discard the tongue edge. This allows a smooth fit inside the frame of the stall. Rip the final board to the dimension measured, then insert this board into the gap.

Step 6: From the outside of the stall, use a 3/8" drill bit, to drill out the holes for the Access Plate. Reinsert bolts through Access Plate and tighten. Drill holes for top and bottom center support bolts. Reinsert bolts and tighten.

Thank you for buying a Priefert Wood Kit!