



Horsewalker Control Box Touch Screen Replacement

These instructions are designed to provide direction, procedure and guidance when replacing the Touch Screen in the Horsewalker Control Box.

Proper installation insures success in replacement and operation of new components. Please read and understand these instructions completely before beginning removal and replacement of the Touch Screen.







WARNING:

Disconnect power supply to Control Box prior to removal of components to prevent possible electrocution hazards. Failure to do so can cause injury or death.

Note: Before beginning, be familiar with the new Touch Screen component, read the attached decal completely, and recognize the change in connection from the original.

1. Disconnect power to the Control Box.
2. Open the door to the control panel and unplug the RS485 communication wire and the 24v power on the underside of the touch screen (See Fig.1).
3. Remove the 10 nuts on the back side of the touch screen using a $\frac{5}{16}$ " nut driver (See Fig.2). Remove old gasket.
4. Locate the foam gasket and install on the new touch screen (See Fig.3).
5. Install the new touch screen with 10 nuts removed previously.
6. Plug in the 24v power and the RS485 communication.
Make sure the RS485 is plugged into the new location (See Fig.4 & 5).

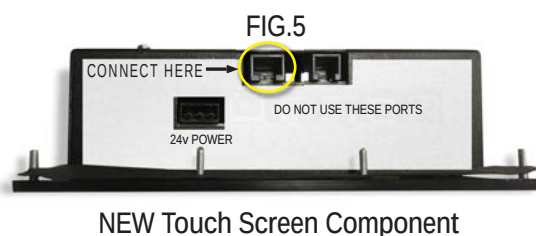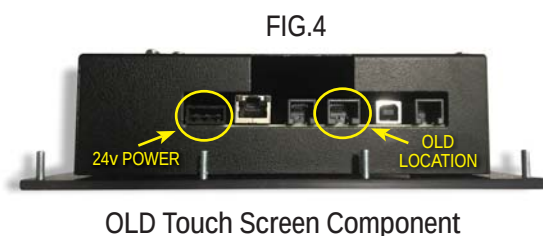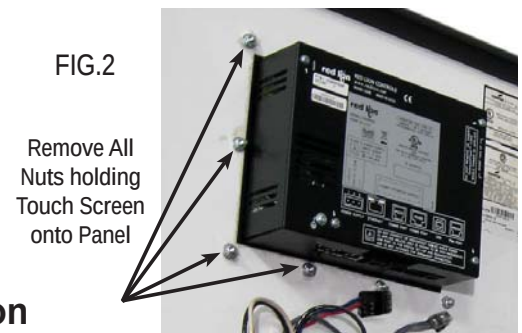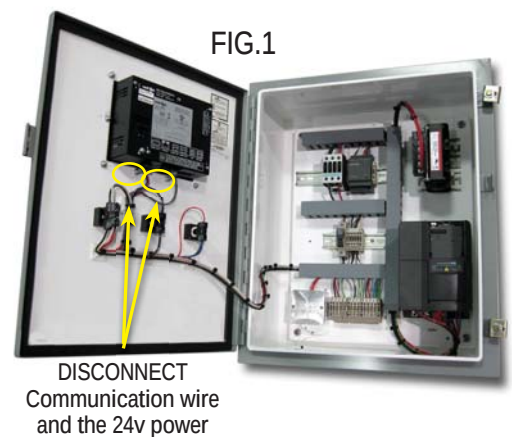

1-800-527-8616
903-572-1741 903-572-2798 Fax
sales@priefert.com

Priefert®
Farm, Ranch & Rodeo

2630 S. Jefferson
P.O. Box 1540
Mt. Pleasant, TX 75456-1540